 


SAFEGWAY SUSTAIN

Created with Passion, Designed for Safety

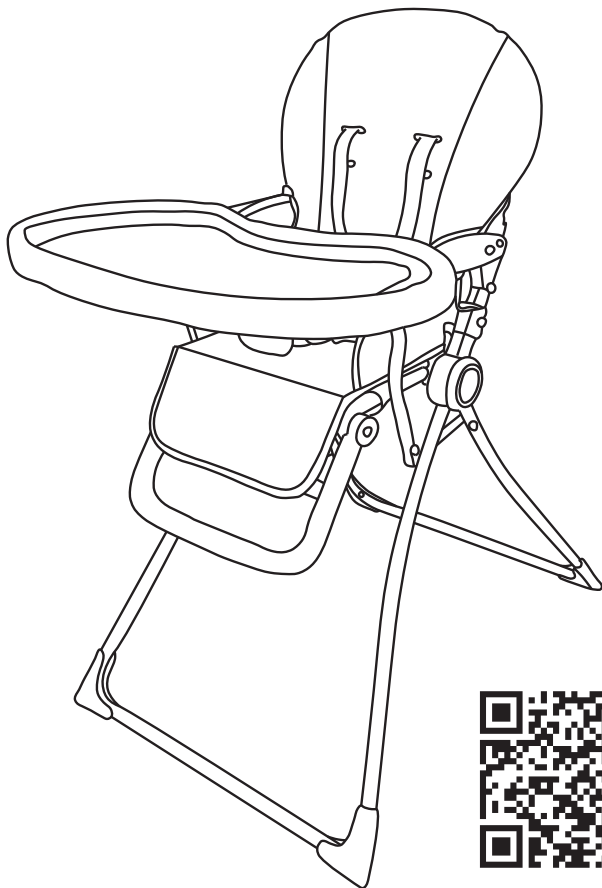

USER MANUAL

Notices

IMPORTANT:

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

WARNING! Your child will only be protected if you follow the warnings and recommendations in these instructions.

01. Read these instructions carefully before using the high chair to ensure proper use of the product.
02. WARNING: Never leave your child unattended.
03. WARNING: Ensure that all locking devices are engaged before use.
04. WARNING: To avoid injury, ensure that your child is kept away from the high chair when opening and folding.
05. WARNING: Do not let your child play with the high chair.
06. WARNING: Always use the harness system to secure your child.
07. Accessories which are not recommended by the manufacturer must not be used.
08. WARNING: The high chair can only be used for one child. Do not allow other children onto the high chair.
09. NOTICE: The maximum weight capacity of the high chair is 15kg, approximately 6 to 36 months old.
10. NOTICE: The warranty shall be voided if you do not follow these instructions.
11. WARNING: Do not use the high chair if there are warn or loose connections, damaged or missing parts.
12. WARNING: Do not fold the high chair while your child is still inside.
13. WARNING: Do not use the high chair near stairs.

Notices

14. NOTICE: Only spare parts which are supplied or recommended by the manufacturer are permitted for use.
15. NOTICE: The assembly, opening and folding must only be performed by an adult.
16. WARNING: Do not allow your child to stand up in the high chair.
17. Never allow child to use footrest to climb in or out of the high chair.
18. Do not place any heavy bags, packages, or other items on the highchair tray. They may cause the chair to tip over.
19. To avoid the danger of suffocation, remove all plastic covers before using the highchair. Immediately discard the plastic cover to keep it away from babies and children.
20. Do not leave the highchair near walls, curtains, or windows, where the child can become tangled, or where a child may be able to use their feet to push against the highchair.
21. To avoid the risk of fire, never leave the highchair near sources of strong heat such as open fires, electric heaters, and gas stoves. If the chair is exposed to direct sunlight, wait for it to cool down before placing your child in it.
22. Always use high chair on a flat, smooth surface.
23. Check your high chair for any parts that may be broken, torn or missing before use and on a regular basis. Discontinue use of the high chair should it malfunction or become damaged.

Opening the High Chair



Remove the high chair from the packaging.



Lift the backrest upwards as indicated in the image.

Ensure that the high chair locks into place.



Place the feeding tray onto the high chair.



Fully assembled high chair.

Adjusting the backrest and feeding tray




Pull the levers at the back of the backrest upwards and adjust the recline position of the backrest.




Press the adjusting buttons underneath the feeding tray and adjust the tray to the required position.


Using the Safety Harness

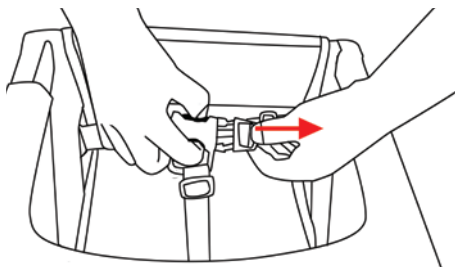


Press the harness buckle to release the one side.

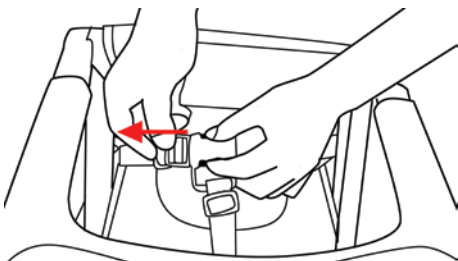


Press the other harness buckle to release the other side.

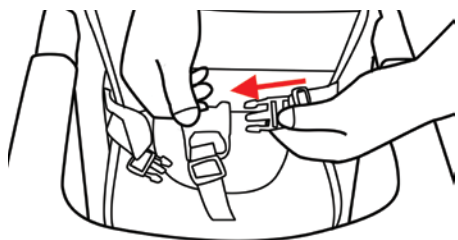

Insert the one side of the buckle into the harness.

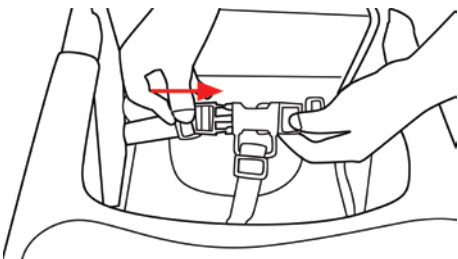

Insert the other side of the buckle into the harness.

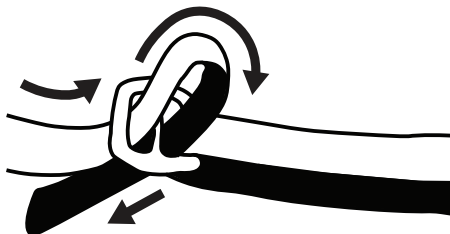

To adjust the length of the straps, thread them inwards or outwards as shown in the image.

Folding the High Chair



Pull the release levers on both sides of the high chair.



Press the backrest in a forward direction to fold.



Fully folded high chair.

Warranty and Cleaning Instructions

- The warranty period starts from the date of purchase and is valid for a period of 12 months.
 - The warranty applies to material and manufacturing defects only.
 - The date of purchase can only be determined with an original sales receipt.
 - The warranty is only applicable to the original owner and is not transferable.
 - The warranty is only applicable to products that have not been adapted by the user.
 - In the case of any defects, the owner is required to return the product to the retailer. If the retailer cannot solve the problem, he must return the product, complete with a clear description of the complaint and the original sales receipt to the manufacturer. An exchange or return cannot be demanded.
 - Repairs do not constitute an extension to the warranty term.
 - The manufacturer is not liable for any damages other than those on products supplied.
-
- No warranty is given if:
 - The product is not supplied to the manufacturer complete with the original sales receipt.
 - Defects are caused by improper use or maintenance that is not in accordance with the instruction in this manual.
 - Repairs are carried out by third parties.
 - Defects are caused by neglect.
 - Damage is determined.
 - If there is normal wear and tear of the parts, belts and/or cover, which may be expected from everyday use.
 - The stated warranty terms and conditions have not been satisfied.

WASHING:

- Clean the metal and plastic parts with a sponge and mild detergent. Do not use abrasive detergents.
- Wash the seat cover by using a soft brush with mild washing liquid.
- The seat cover can be removed for washing if it becomes extremely dirty.

WARNING: Never make any alterations to the high chair.

Contact: Safeway at info@safewaybabies.co.za