

# SAFETYWAY ZOOM

MULTI-FUNCTIONAL CHILDREN'S WALKER

3-in-1: Walker, Ride-on, Scooter.

Owner's Manual



Read the instructions carefully before use and assembly of this Multi-functional Walker.

Keep instructions for further use.

Failure to follow these instructions may affect the safety of the child.


**IMPORTANT! KEEP FOR FUTURE REFERENCE.**

**WARNING! TO BE ASSEMBLED BY AN ADULT.**

Recommended Max Weight: 15kg

Recommended Age Group: 12 – 24 months

## PARTS LIST

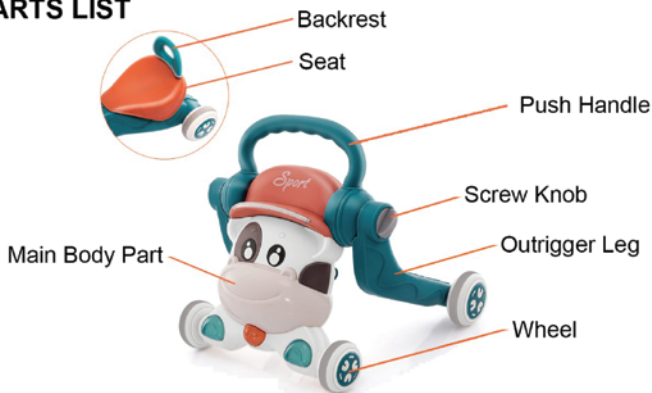

## FUNCTIONS

### *Push Handle Height Adjustment*



Squeeze the red adjusters on the inner side of the main part with one hand, use the other hand to adjust the push handle to the required height, then release the adjusters.

### *Music and Light Function*



Insert 3 x AA batteries into the battery box on the inner side of the main part. (Pay attention to the positive and negative pole installation errors) Switch on the Red Switch on the inner side of the main part. Press the heart button to have music and colorful lights.

### *Speed Control Adjustment*



Rotate the screws on the wheels of the legs (as indicated by the arrow) to adjust the walking speed of the walker.

**NOTE: For use in Walker Mode only.**

## ASSEMBLY

### STAGE 1 - WALKER MODE

Insert Front wheels onto Main Part.  
Screw (using the Screw Knob) the right and left Outrigger Legs onto each side of the main part with the curve of the leg facing inward/downward.  
Ensure installation is secure.




### STAGE 2 - RIDE-ON MODE



Exchange the Legs from right to left and turn around so that the curve of the leg will face outward/upward. Loosen the Speed Adjustment on the wheels of the Legs. Assemble the Seat and Backrest. Insert the Legs into position in the center of the Main Part. Insert the Seat in between the two Legs. Using the Screw Knob, screw the left and right legs onto the Main Part. Turn the screw at the bottom of the Legs to secure the two legs together.  
Ensure installation is secure.

### STAGE 3 - SCOOTER MODE

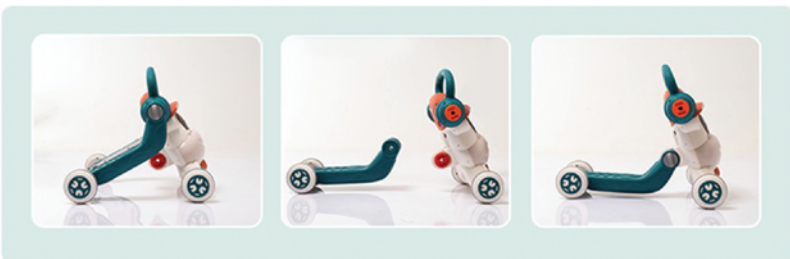

Loosen the screw at the bottom of the legs to separate the legs. Exchange the Legs from right to left and turn around so that the curve of the leg will face inward/downward. Insert the Legs into position in the center of the Main Part. Using the Screw Knob, screw the left and right legs onto the Main Part. Turn the screw at the bottom of the Legs to secure the two legs together.  
Ensure installation is secure.



- Do not place any load on the walker, otherwise it will affect the stability of the product.
- Before use, remove and dispose of any plastic bags and other packaging (e.g fasteners, fixing ties, etc), and keep them out of reach of children.
- Check that the product and all its components have not been damaged during transportation.
- Check regularly that the product is not broken or damaged. If the product is damaged, keep it out of reach of children.
- The product must only be assembled by an adult. For the correct assembly and use of the product, please refer to the following instructions.

## **STAIR HAZARD**

Avoid serious injury or death. Prevent access to stairs, steps and uneven surfaces, slopes or unstable floors, swimming pools or other sources of water. Only use the walker on flat and stable surfaces to ensure walker does not become unstable.



- Never leave the child unattended. Always keep the child in view while using the walker.
- Guard all fires, heating, and cooking appliances.
- Remove hot liquids, electrical flexes, and other potential hazards from reach.
- Prevent collisions with glass in doors, windows, and furniture.
- Do not use the walker if any components are broken or missing.
- The walker should be used only for short periods of time (e.g 20 – 30 min)
- The walker is not intended for children weighing more than 15kg.
- When moving the walker, the child should not be placed on it.
- Do not use replacement parts other than those approved by the manufacturer.
- The illustrations used in this manual are to explain the assembly, operation method, and structure of the product. When there is a small difference between the real object and the illustrations, the real object shall prevail.
- To ensure that the child is not harmed by accidents, check and maintain the walker regularly.
- Before each use, check that all components are intact and make sure all lockable positions are secured.
- The product is suitable for age range 12 – 24 months.