


SAFETYWAY

MAGNI

Created with Passion, Designed for Safety

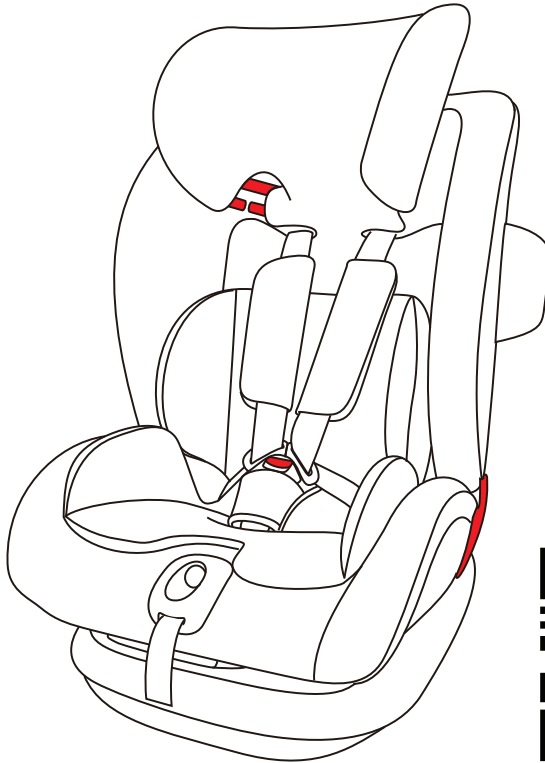

INSTALLATION INSTRUCTIONS

GROUPS 1 / 2 / 3 (9 - 36kg)

Forward facing 9 to 18kg

Booster Seat 15 to 36kg

Contents

Introduction	2
Important Notices	3 - 4
Restraint Features	5
Use of the Child Restraint in the Vehicle	6
Adjusting the Height of the Headrest / Harness	7
Adjusting the Recline Position	7
Using the Buckle & Harness System	8
Install Forward Facing - Group 1 (9 to 18kg)	9
Install Forward Facing - Group 2/3 (15 to 36kg) Booster Mode	10
Removing the 5-point harness	11
Removing the cover	12
Washing Instructions	12
Care for the Harness Buckle	13
Warranty	14
Notices & Installation Methods	15

Introduction

Dear parents

Congratulations on the purchase of your Child Safety Seat.

Safety, comfort and user-friendliness have at all times played an important role in the development of the Child Safety Seats.

This product meets the most stringent safety regulations and has passed the most stringent compulsory safety testing required by law.

Research shows that a high number of child restraint safety seats are installed incorrectly. Therefore, please take the time to read through this instruction manual carefully. Your child's safety can only be guaranteed if this product is used according to correct installation following these instructions.

Continuous research by our development team, user tests and consumer reactions ensure that we are kept fully up-to-date in the field of child safety. Therefore, if you have any questions concerning the use of the Child Safety Seat, please do not hesitate to contact us.

Distributor details :

Unimark Distributors CC
P.O. Box 912-1095
Silverton
0127

Tel : +27 12 8041793
Fax : +27 12 8041795

E-mail : info@safewaybabies.co.za

Web : www.safewaybabies.co.za

Important Notices

- **WARNING:** Read this instruction manual carefully. Study the illustrations in this instruction manual before use, and, when installing the car seat. The Child Safety Seat is a safety product and is only safe when used according to the instructions.
- **WARNING:** The correct fitting of the Child Safety Seat is of vital importance for the safety of your child. See the Installation section and/or the sticker on the side of the seat.
- **WARNING:** Ensure that the rigid items and plastic parts of the Child Safety Seat are so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- **WARNING:** Never use the Child Safety Seat rearward facing on a seat equipped with a front airbag, as this can result in serious injury or death. This does not apply to so-called "side airbags".
- **WARNING:** The Child Safety Seat must only be used on a forward facing seat that is fitted with an automatic 3-point safety belt or ISOFIX points that are approved according to ECE R16 or other equivalent standards, that comply to SABS 1080.
- **WARNING:** The vehicle seat belt holding the restraint to the vehicle should be tight, the straps restraining your child should be adjusted to your child's body, and the straps should not be twisted.
- **WARNING:** After an accident, the seat may become unsafe due to damage that is not immediately noticeable. It should therefore be replaced.
- **WARNING:** No alterations or additions may be made to the Child Safety Seat, as this could affect part or the overall safety of the seat.
- **WARNING:** Always cover the Child Safety Seat when the car is parked in the sun, as plastic and metal parts may become extremely hot and it may be too hot for the child's skin. The fabric could also unnecessarily discolour.
- **WARNING:** Never leave your child unattended in the car.
- **IMPORTANT:** The lap strap should be worn low down, so that the pelvis is firmly engaged.
- **WARNING:** Ensure that all luggage and objects likely to cause injury in the event of an accident are secured properly.
- **WARNING:** The Child Safety Seat must not be used without the cover. Always use an original Child Safety Seat cover, as the cover contributes to the safety of the seat.
- **WARNING:** For future use of the seat, it is important that you store the instruction manual in a safe place and close at hand.

Important Notices

- It is recommended that child safety seats not be used longer than 10 years after the date of purchase. The product properties may deteriorate due to ageing of the plastic and/or sunlight, without this being visibly apparent.
- The manufacturer has taken into consideration the fact that car seats may cause indentations in the car upholstery. This is unavoidable, however, due to the prescribed safety standards, and because the car seat must be installed tightly in order to protect your child, the manufacturer is not liable for any damage that may occur to the car upholstery as a result of this.
- The seat must always be secured with a seat belt or ISOFIX points even when not in use. An unsecured seat may injure other passengers in the car in the event of an emergency stop.
- The Child Safety Seat may be used on either the front or the back seat. However, we recommend that it is fitted on the back seat.
- Always use the seat, even on short journeys, as this is when most accidents occur.
- Prior to purchase, check to make sure the seat fits properly in your car, consult the assistant where you are purchasing your Child Safety Seat.
- Tell your child that he/she should never play with the belt buckle.
- The moving parts of the Child Safety Seat should not be lubricated in any way.
- The safety of the seat can only be guaranteed by the manufacturer if it is used by the original owner.
- We strongly advise that you never use a second-hand product, as you can never be sure what has happened to it.
- The belt pads are important for the safety of your child, therefore use them at all times.
- DO NOT use any load bearing contact points other than those described in the instruction manual and marked on the child restraint i.e. where the vehicle seat belt touches the child restraint. If in doubt, please contact the manufacturer.
- NOTE: The adult seat belt buckle should be below the highest load bearing point of the child safety seat. If in doubt, please contact the manufacturer.
- The Child Safety Seat has been approved according to the strictest European safety standards (ECE R44/04) and is suitable for Group 1 (9-18kg), Group 2 (15-25kg) & Group 3 (22-36kg).
- WARNING: Do not use the Child Safety Seat forward facing before your child is 9kg. It is recommended to use the Child Safety Seat rearward facing up to 13kg.

Restraint Features

Headrest

Side Protection System

Air Sac Cushion

Seat Belt Guide

Shoulder Pads

Harness Buckle

Comfort Pad

Harness Adjuster Buckle


Harness Adjuster Strap

Shoulder Strap

Lap Belt

Belt Guide


Recline Adjuster Handle

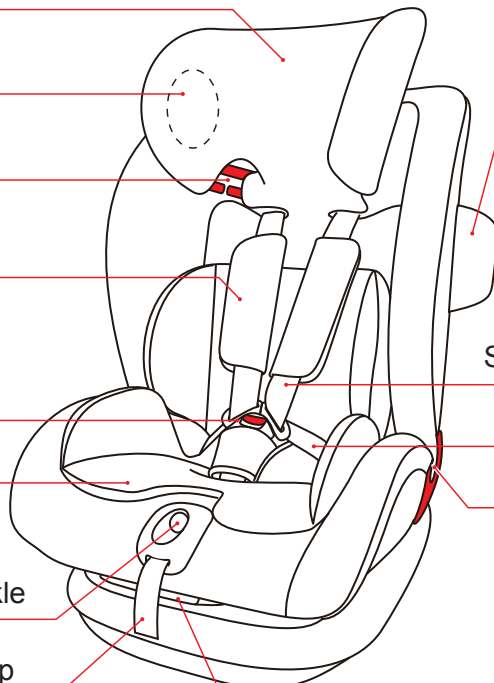

Headrest Adjuster Handle


Belt Guide

Belt Guide

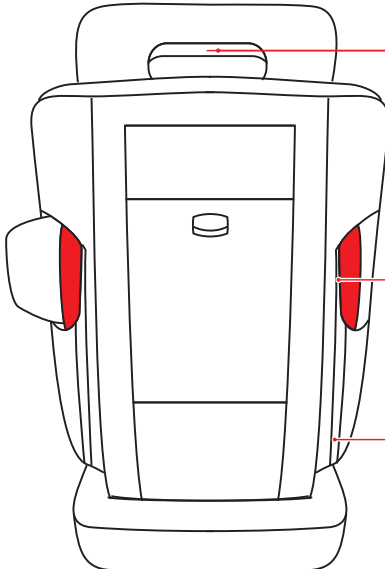


Use of the Child Restraint in the Vehicle

IMPORTANT: The child seat **MUST** be installed using a 3-Point Seat Belt. A 2-Point seat belt may not be used.

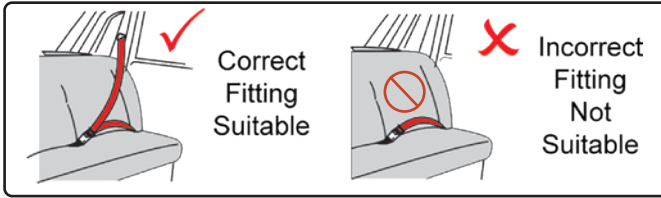

Please observe the regulations applicable to your particular country. The safety belt must be approved to ECE R 16 or a comparable standard. You can use your child car seat as follows:

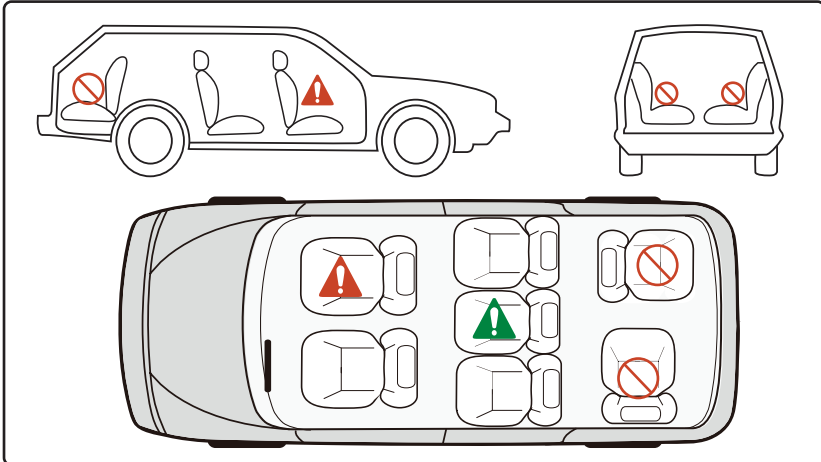



Use in vehicle:		
Rearward facing child seat		No
Forward facing child seat		Yes
Use with 3-point vehicle belt for Group 2/3		Yes
Use with 2-point vehicle belt		No
On centre passenger seat with 3-point belt		Yes
On passenger seat with active airbag		No
On sideways facing passenger seat		No
On rearward facing passenger seat		No

Adjusting the Height of the Headrest / Harness

Adjust the height of the Headrest by pulling the Headrest Handle then move the headrest up or down to suit your child's height. The harness straps move while adjusting the headrest.

Adjust the Shoulder Straps to the correct height for your child.



The Shoulder Straps must be inline or just above your child's shoulders.

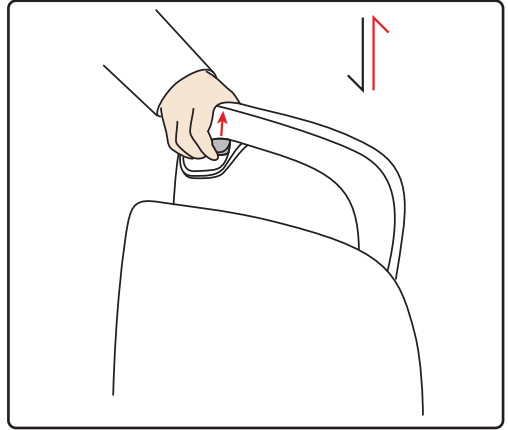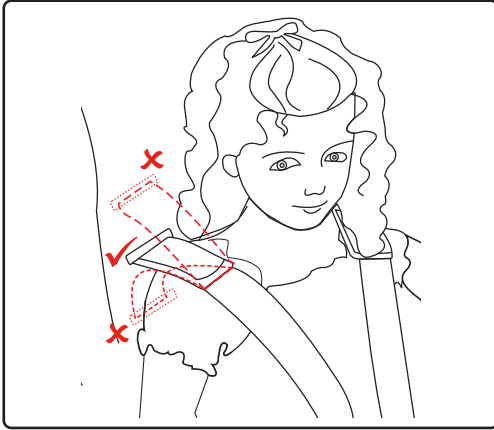

Adjusting the Recline Position

Adjust the reclining position of the child seat by pulling the Recline Adjuster underneath the front of the seat and adjust the seat to the required position.

The seat can be adjusted to 3 recline positions.


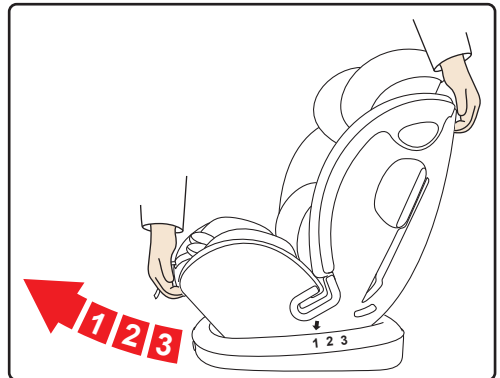
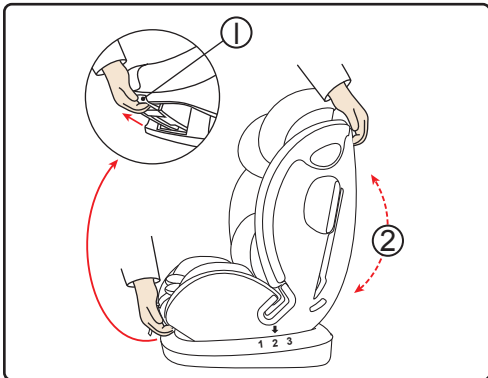


Using the Buckle & Harness System

Loosen the harness by pressing the Harness Adjuster Buckle located at the front of the seat, then pull the harness straps forward. Do not pull on the belt pads as they will not move.

Unfasten the harness buckle by pressing the red button and remove the tongues.


Move the harness straps to the side of the child seat.

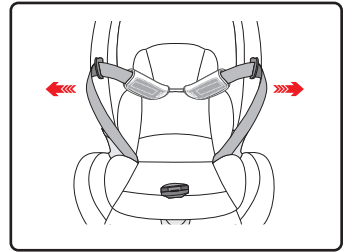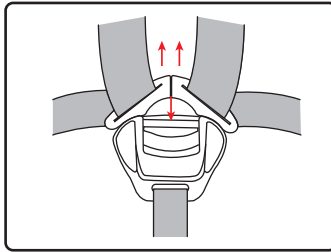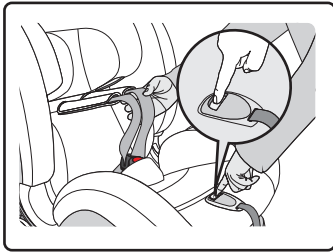

Place your child in the child seat and position the harness straps around your child.

Fasten the buckle by joining the 2 tongues together and clicking them into the buckle.

Pull the front Harness Adjuster Strap until the harness fits snugly around your child. Ensure that the straps are not twisted.

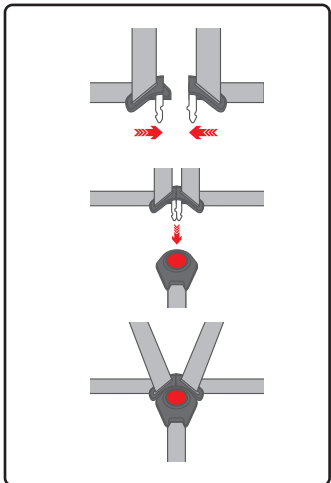

Install Forward Facing - Group 1 (9 to 18kg)

WARNING: Do not use forward facing before your child's weight exceeds 9kg.

Adjust the child seat to recline position 1, 2 or 3 (See page 7).





Place the child seat onto the vehicle seat.

Pull the vehicle seat belt outwards and guide the tongue through the back of the child seat.

Clip the tongue into the buckle. Ensure that it **CLICKS** into place.

Pull the shoulder belt upwards as tight as you can and place the Red Lock-Off Clip over the shoulder belt. This ensures that the lapbelt section holds the child seat nice and tight.

NOTE: DO NOT place the clip over both belts.

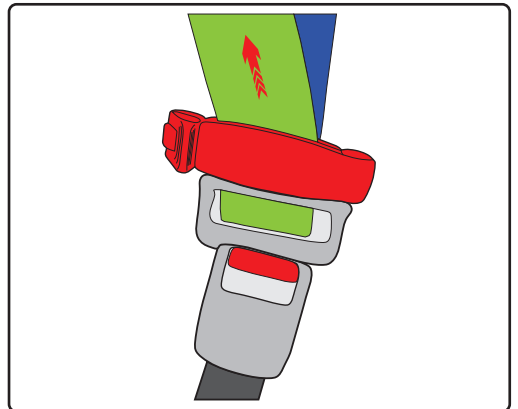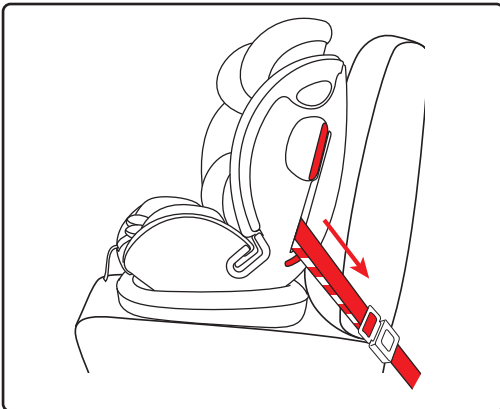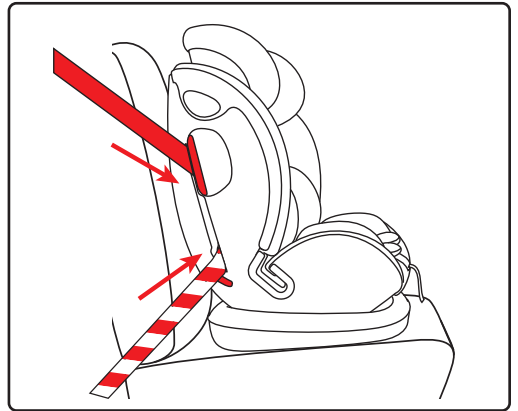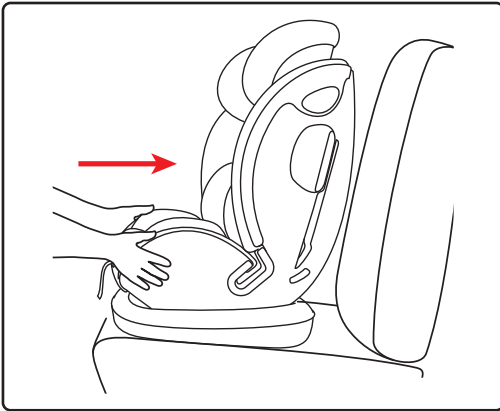

Install Forward Facing - Group 2/3 (15 to 36kg) Booster Mode

First remove the harness system (See page 11).





Before installing the Child Seat, place your child in the seat and adjust the Headrest to the correct height (see page 7).

Recline the Child Seat to recline Position 3 (Upright).

Place the Child Seat onto the vehicle seat.

Thread the vehicle's shoulder belt through the headrest belt guide.

Place your child into the child seat and fasten the seat belt over them.

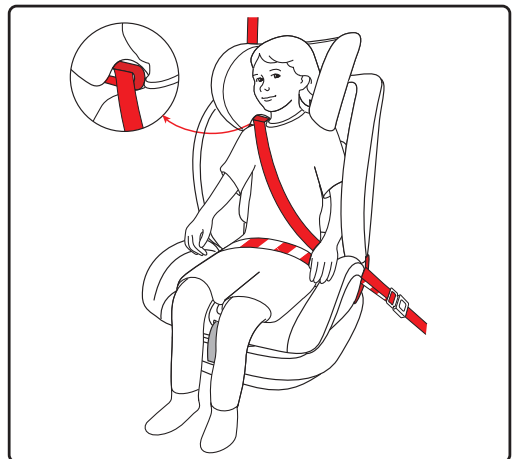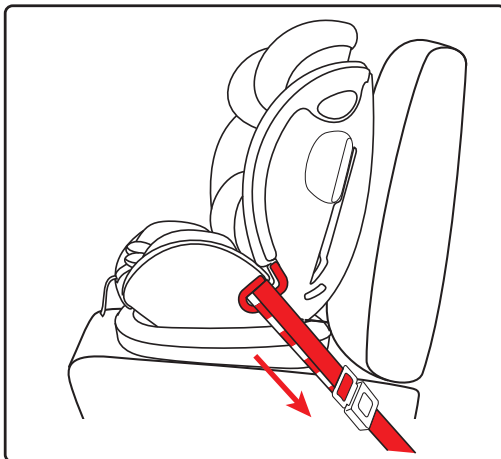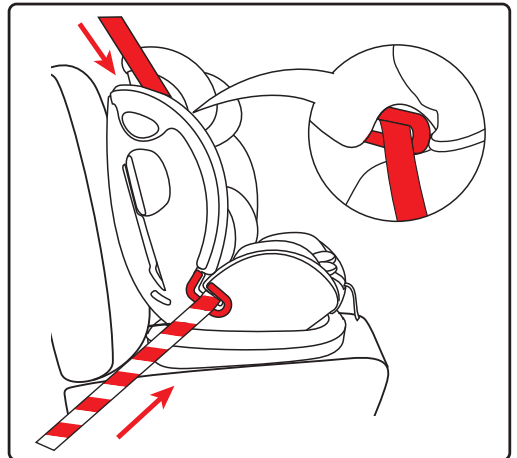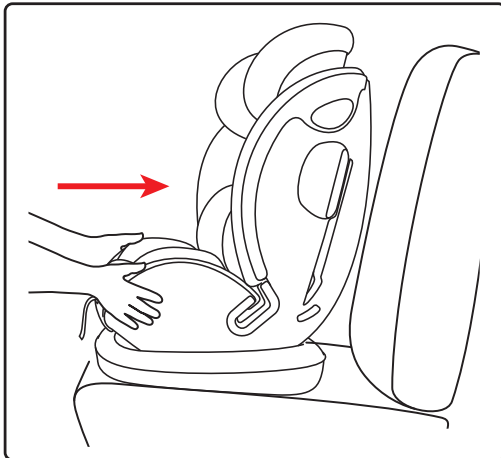

Removing the 5-Point Harness

Loosen the harness by pressing the adjuster buckle located at the front of the seat, then pull the harness straps forward (See page 8).

At the back of the seat, locate the Metal Yoke.

Separate the shoulder straps from the Metal Yoke.

From the front of the seat, pull the shoulder straps outwards.

Separate the shoulder pads from the metal bracket.

From the front of the seat, pull the shoulder pads outwards.


Separate the buckle tongues from the shoulder straps.

Place the tongues back into the buckle so that they do not get lost.

Remove the buckle from the seat.

Remove the shoulder straps from the seat.



NOTE: Store the harness system in a safe place for future use

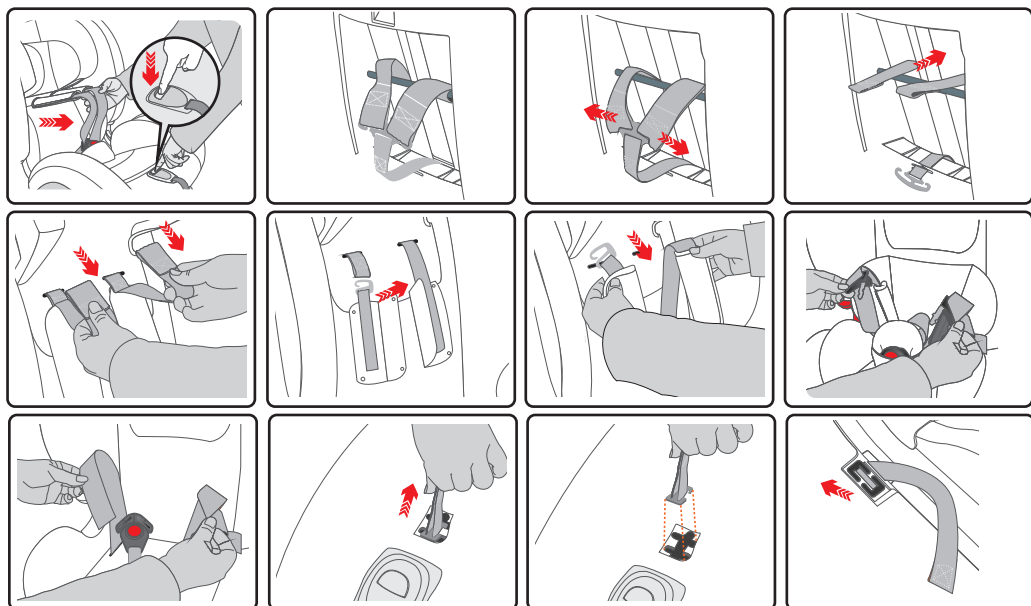

Removing the Cover

Remove the Harness System from the Child Seat (See page 11).

Remove the cover from the shell.

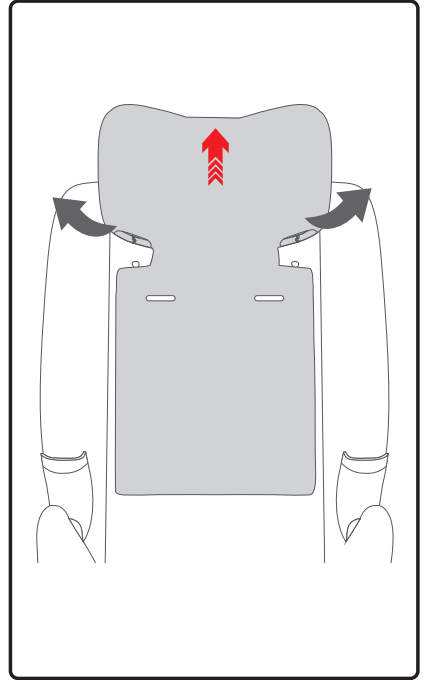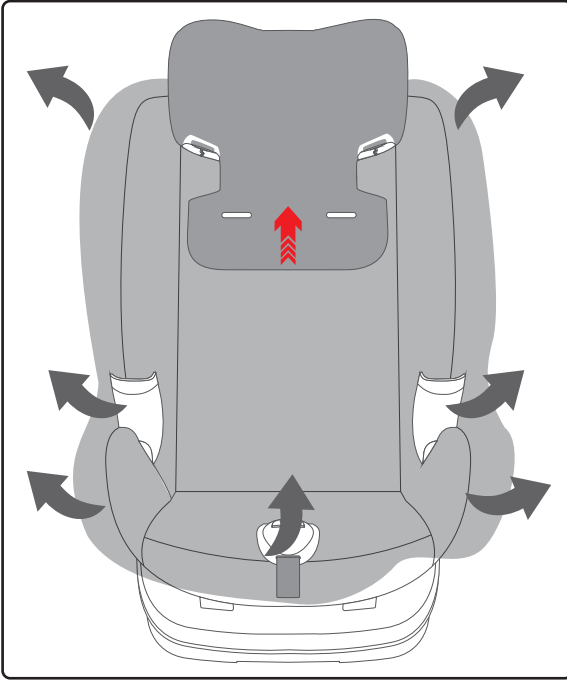

Washing Instructions

The cover and belt pads are easily removable and can be washed by hand at a maximum temperature of 30 C. Do not use a dryer.

The child seat may be cleaned with lukewarm water and a gentle soap. Do not use abrasive detergents.

Cover : 100% polyester fibre
Filling : 100% polyurethane



Maximum
temperature
of 30 degC.



Never use
chlorine
bleaches



Do not
tumble dry



Do not
wring



Do not
iron

Care for the harness buckle

It is vital for the safety of your child that the harness buckle works correctly. Malfunctions of the harness buckle are usually caused by accumulations of dirt or foreign bodies.

Malfunctions are as follows:



- The buckle latches are ejected slowly when the red release button is pressed.
- The buckle latches will no longer lock into the buckle (i.e. they are ejected if you try to push them in).
- The buckle latches engage without an audible “click”.
- The buckle latches are difficult to insert (you feel resistance).
- The buckle only opens if extreme force is applied.

Remedy:

Wash out the harness buckle so that it functions properly again.

Cleaning the harness buckle

- 1 - Remove the harness buckle from the seat (See page 11).
- 2 - Soak the harness buckle in hot water with washing-up liquid for at least an hour. Then rinse and dry it thoroughly.

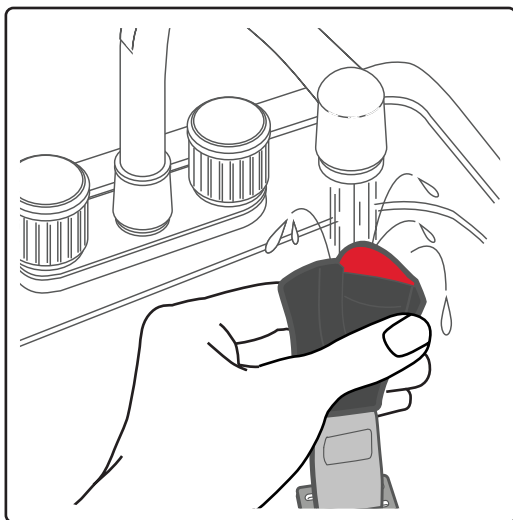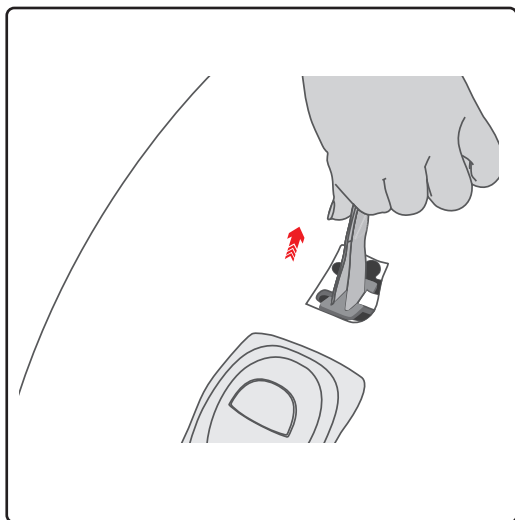

Warranty



- The warranty period starts from the date of purchase and is valid for a period of 12 months.
- The warranty applies to material and manufacturing defects only.
- The date of purchase can only be determined with an original sales receipt.
- The warranty is only applicable to the original owner and is not transferable.
- The warranty is only applicable to products that have not been adapted by the user.

- In the case of any defects, the owner is required to return the product to the retailer. If the retailer cannot solve the problem, he must return the product, complete with a clear description of the complaint and the original sales receipt to the manufacturer. An exchange or return cannot be demanded.
- Repairs do not constitute an extension to the warranty term.
- The manufacturer is not liable for any damages other than those on products supplied.

- No warranty is given if:
 - The product is not supplied to the manufacturer complete with the original sales receipt.
 - Defects are caused by improper use or maintenance that is not in accordance with the instruction in this manual.
 - Repairs are carried out by third parties.
 - Defects are caused by neglect.
 - Damage is determined.
 - If there is normal wear and tear of the parts, belts and/or cover, which may be expected from everyday use.
 - There is damage to the car upholstery.
 - The stated warranty terms and conditions have not been satisfied.

Notice

1. This is a “Universal” child restraint system. It is approved to Regulation No.44,04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a “Universal” child restraint for this age group.
3. This child restraint has been classified as “Universal” under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.

Group	Weight	Installation	Approx. Age	Recline Position
1	9 to 18kg	Forward Facing	1 Year to 4 Years	 <p>Recline Position : 1, 2 or 3</p>
2/3	15 to 36kg	Forward Facing	3 Years to 12 Years	 <p>Recline Position 3</p>